Digi m10

Satellite Modem

Hardware Reference

Date: 24 November 2009

90033937_B

Copyright Notice

Digi International has prepared this manual for the use of its employees, agents, and its customers. This manual contains proprietary information, which is protected by copyright. Preparing derivative works or providing instruction based on this manual is prohibited without written permission from Digi International.

All information in this manual is accurate and reliable to the best of Digi International's knowledge. Digi International may make improvements and / or changes in this manual at any time without prior notice.

Trademarks

The Digi m10 is a registered trademark of Digi International Inc. All other company and / or product names mentioned in this manual are the property of their respective owners.

Document Revision History

Version	Description	Date
A	Initial release of the new hardware reference manual	21 Sep 2009
B	Extended packet information removed. Images updated.	10 Nov 2009

Table of Contents

About This Manual **7**
Target Audience 7
Symbols Used in This Manual 7
Reference Documents 7
Where to Get Help 8
1. Overview of the Digi m10 ..... **9**
2. Interfaces **9**
2.1 Connector Pins 9
2.2 Serial Interface 12
2.3 Power and Ground 12
2.4 Power Enable 12
2.4.1 Powering Up 13
2.4.2 Powering Down 13
2.5 DA (Data Available) 14
2.6 SA (Satellite Available) 14
2.7 RF Interface 15
3. Technical Specifications **17**
3.1 Environmental 17
3.1.1 Electromagnetic Compatibility 17
3.1.1.1 Radiated Emissions 17
3.1.1.2 Conducted Emissions 17
3.1.1.3 Radiated Immunity 17
3.1.1.4 Conducted Immunity 18
3.1.1.5 Electrostatic Discharge 18
3.1.2 RoHS 18
3.1.3 Operating Temperature 18
3.1.4 Storage Temperature 19
3.1.5 Operational Shock 19
3.1.6 Operational Vibration 19
3.2 Electrical 19
3.2.1 Power Design 20
3.2.1.1 Power Supply 20
3.2.1.2 Typical Power Consumption 20
3.2.2 Digital Input / Output Specifications 21
3.2.3 Lifespan 21
3.2.3.1 Design 21
3.2.3.2 Failure Rate 21
3.3 Mechanical 21
3.3.1 Module Size 21
3.3.2 Mounting 22
4. Approvals and Certifications **23**
5. Using the Digi m10 ..... **24**
5.1 Interfacing with the Digi m10 24
5.2 The Digi m10 JumpStart Kit 24
6. Antenna Information **27**
Appendix A: Digi m10 Mechanical Drawings **28**

Appendix B: Digi m10 Development Board Schematic 32

List of Tables

Table 1: Connector Pins on the Digi m10 11
Table 2: Transmit and Receive Pins 12
Table 3: Power Pins 12
Table 4: Power Enable Pin 12
Table 5: DA Pin 14
Table 6: SA Pin 15
Table 7: RF Interface Details 15
Table 8: Operating Conditions 19
Table 9: Digital I/O Electrical Specifications 21

List of Figures

Figure 1: Block Diagram 9
Figure 2: Digi m10 Pin Numbering 10
Figure 3: Pin Assignment 11
Figure 4: Timing Diagram for Powering Up 13
Figure 5: Timing Diagram for Powering Down 14
Figure 6: Timing Diagram for Data Available 14
Figure 7: Timing Diagram for Satellite Available 15
Figure 8: RF Connector on the Digi m10 15
Figure 9: Digi m10 Dimensions 22
Figure 10: Interface Between the Host Controller and the Digi m10 24
Figure 11: Layout of the Development Board 25
Figure 12: Digi m10 Mechanical Drawing 28
Figure 13: Digi m10 Mechanical Drawing: Part A 28
Figure 14: Digi m10 Mechanical Drawing: Part B 29
Figure 15: Digi m10 Mechanical Drawing: Part C 30
Figure 16: Digi m10 Mechanical Drawing: Part D 31
Figure 17: Development Board Schematic 33
Figure 18: Development Board Schematic (Part A) 34
Figure 19: Development Board Schematic (Part B) 34
Figure 20: Development Board Schematic (Part C) 34
Figure 21: Development Board Schematic (Part D) 35

About This Manual

This manual defines and specifies the functions of the Digi m10 and its usage. It also contains guidelines for using the development board which comes with the Digi m10 JumpStart Kit.

Target Audience

The target audience for this user manual comprises engineers and business managers who want to augment their company's existing asset-tracking systems with satellite networks. A typical user would be an engineer who is well- versed with wireless data communications.

Symbols Used in This Manual

Symbol	Description
	Provides additional information corresponding to the topic that is being discussed.
	Warning! If ignored, may cause permanent damage to the development kit or injury to a person. Caution! Failure to comply with a caution may result in failure or damage to the device. Danger! Failure to comply with a danger symbol may result in serious injury.

Reference Documents

The following documents have been used in the preparation of this user manual.

- Department of Defense Test Method Standard for Environmental Engineering Considerations and Laboratory Tests, MIL STD 810E
- European Telecommunications Standards Institute, EN 300 832 (A1 version 1.1.1), Electromagnetic Compatibility for Mobile Earth Stations.
- International Electrotechnical Commission, IEC 1000-4-4, Testing and Measurement Techniques -- Immunity to Fast Transient / Burst Immunity Test.
- International Electrotechnical Commission, IEC 61000-4-6, Testing and Measurement Techniques -- Immunity to Conducted Disturbances, Induced by Radio-Frequency Fields.
- ORBCOMM Serial Interface Specification, E80050015.
- ORBCOMM Subscriber Communicator (SC) Standards and Specifications, E25050102.

- ORBCOMM Subscriber Communicator Type Approval Plan, A25TP0017.
- ORBCOMM System Overview, A80TD0008.
- RoHS FAQ -- http://www.rohs.gov.uk/FAQs.aspx#10
- Society of Automotive Engineers, SAE J1455, Joint SAE / TMC Recommended Environmental Practices for Electronic Equipment Design (Heavy-Duty Trucks).
- Technical Requirements for Satellite Earth Stations and Systems (SES); Mobile Earth Stations (MES) Providing Low Bit Rate Data Communications (LBRDC) using Low Earth Orbiting (LEO) satellites operating below 1 GHz, EN 3200 721.

Where to Get Help

For additional information or clarifications regarding this user manual, please get in touch with Digi International using the contact information provided below.

Address	11001 Bren Road East Minnetonka, MN 55343
Phone	952-912-3456
Email	http://www.digi.com/support/eservice/login.jsp

1. Overview of the Digi m10

The Digi m10 is an ORBCOMM Subscriber Communicator, which enables modem-like access to the ORBCOMM satellite network. It is ideal for machine-to-machine (M2M) applications (e.g. asset tracking, utility meters, pipeline monitoring, etc.) that monitor or control remote assets. It can be added to an existing tracking system or run as a stand-alone modem.

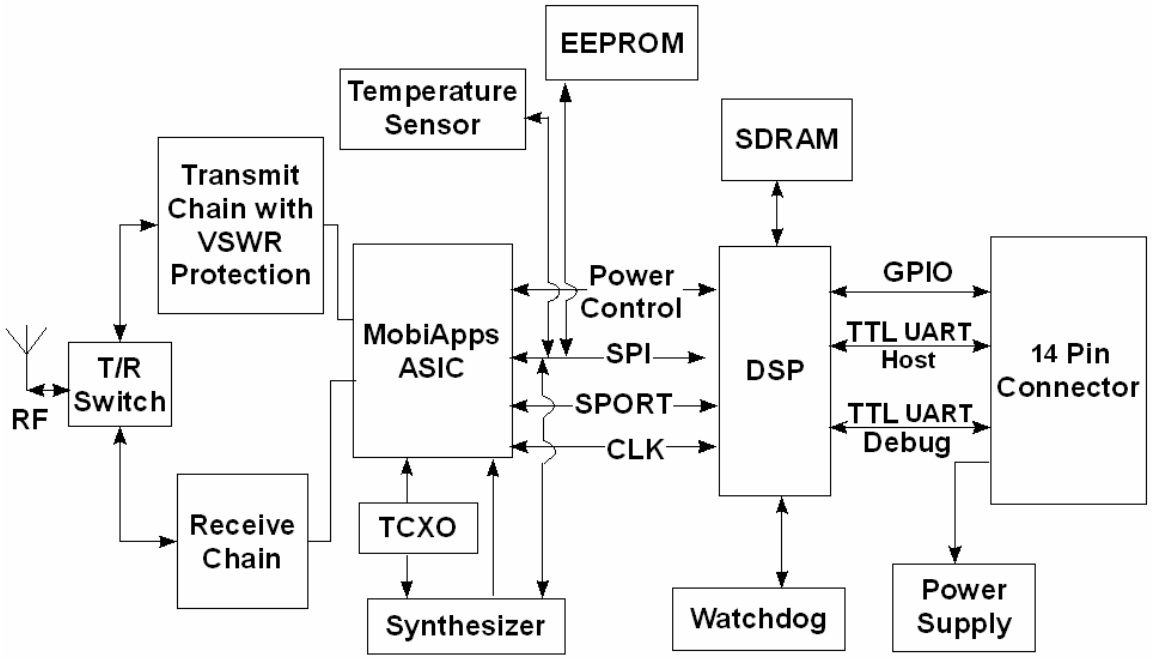

Figure 1: Block Diagram

2. Interfaces

This section explains the different interfaces available on the Digi m10.

2.1 Connector Pins

The host controller provides power and ground, and communicates serially with the Digi m10. The Digi m10 is outfitted with a factory-mounted, 14pin (7 pins across 2 rows) SAMTEC 1mm pitch, standard socket connector (MLE-107-01-G-DV-K). The details of the pin designations are provided below.

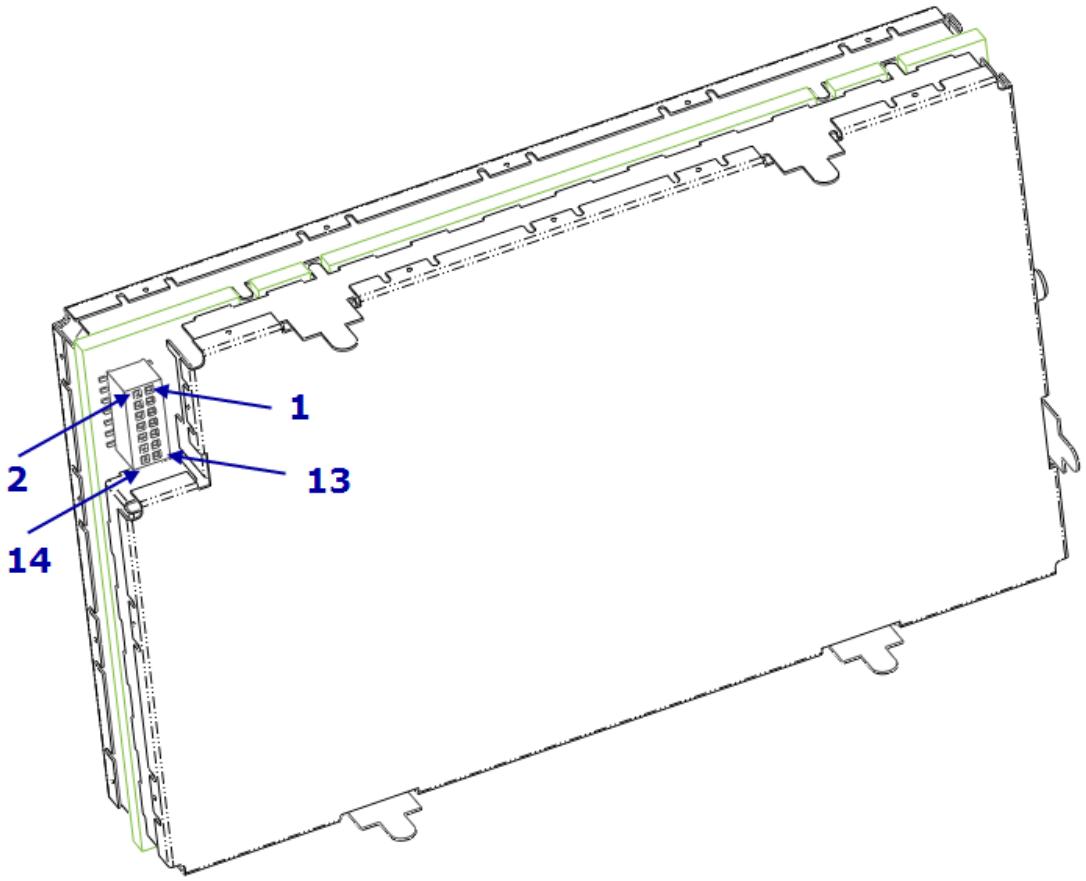

Figure 2: Digi m10 Pin Numbering

The connector provides the necessary interface signals to communicate over a 3.3V TTL level serial link and to power Digi m10. Basic communication can be established using the Tx & Rx lines and the remaining signals provide additional handshaking (RTS/CTS), status (SA/DA) and debug information (Dbg_Tx/Dbg_Rx) as described in the following sections.

Refer to Table 1 for details. The Digi m10 can be connected to the host PCB using a 14-pin SAMTEC 1mm pitch, stacker header connector (MW-07-03-G-D-147-065-P).

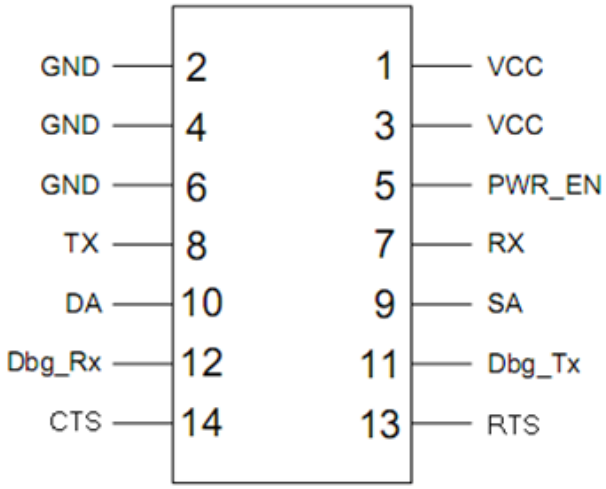

m10 connector pin out as viewed from the bottom side of m10

Figure 3: Pin Assignment

Table 1: Connector Pins on the Digi m10

Pin	Name	Description	Digital I/O Direction	Comments
1	VCC	Supply		
2	GND	Ground		
3	VCC	Supply		
4	GND	Ground		
5	PWR_EN	Digi m10 Power Enable	Input	Pulled low using 47KΩ
6	GND	Ground		
7	RX	3.3 V RS232 Interface. Host controller to the Digi m10	Input	
8	TX	3.3V RS232 Interface. Digi m10 to host controller.	Output	
9	SA	Satellite Available	Output	
10	DA	Data Available	Output	
11	Dbg_Tx	3.3V UART Interface Digi M10 to Debug Port	Output	
12	Dbg_Rx	3.3V UART Interface Debug Port to Digi m10	Input	
13	RTS	3.3V UART Interface. Host controller to Digi m10	Input	
14	CTS	3.3V UART Interface. Digi m10 to Host controller	Output	

2.2 Serial Interface

The main serial interface provides device management and monitoring using 3.3 V levels. The serial data is carried on the Transmit (TX) and Receive (RX) lines. The details of the Transmit and Receive pins are shown in Table 2. An RS232 level shifter is required to connect the Digi m10 to a PC. This is already available on the development board, which comes with the Digi m10 JumpStart Kit.

Table 2: Transmit and Receive Pins

Pin	Name	Description
8	TX	3.3 V RS232 interface; Digi m10 to the host controller
7	RX	3.3 V RS232 interface; host controller to the Digi m10

2.3 Power and Ground

The Digi m10 is powered using five pins of its 14-pin connector (see Table 3). The five mounting pins on the shield of the Digi m10 are also connected to the ground plane of the Digi m10.

Table 3: Power Pins

Pin	Name	Description
1	VCC	Supply
2	GND	Ground
3	VCC	Supply
4	GND	Ground
6	GND	Ground

2.4 Power Enable

The Power Enable signal is used to turn the Digi m10 ON or OFF. It is an active high logic-level signal. The power enable signal can be from 3V min to 18V max. This will help users who do not want separate PWR_EN functionality as they can tie PWR_EN to the Digi m10 supply voltage. However, in this condition, the Digi m10 will be always be powered ON (consuming receive current) unless the user cuts OFF Digi m10 power. This signal has to be maintained at an active high level in order to keep the Digi m10 ON.

Table 4: Power Enable Pin

Pin	Name	Description
5	PWR_EN	Digi m10 Power Enable

This line is pulled low using a 47KΩ resistor.

2.4.1 Powering Up

To power on the Digi m10, the host controller must provide an input voltage between 9 V and 18 V DC and then set the PWR_EN pin to active high. Typically, the Digi m10 will take two seconds to be in a ready state. After powering on, the Digi m10 will toggle the DA pin once to let the host controller know that it is ready to receive serial commands.

After the DA pin's initial toggle, its subsequent active high state indicates messages from the satellite that are available in the Digi m10's inbound (IB) queue. The Digi m10's timing diagram for powering up is shown in Figure 4.

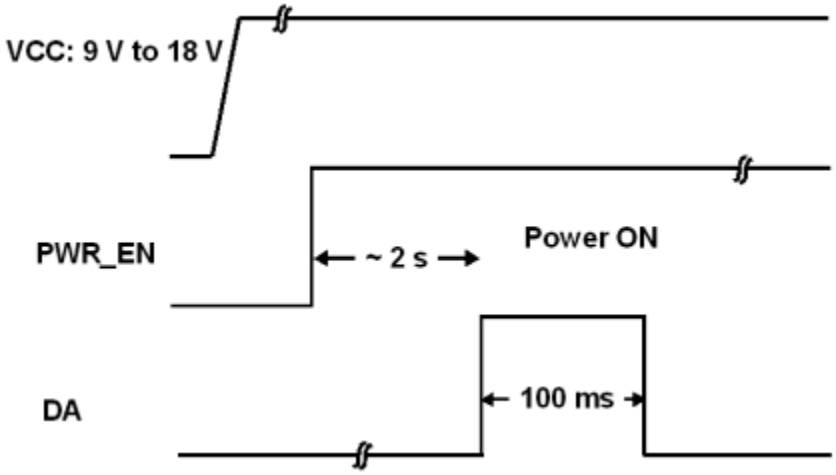

Figure 4: Timing Diagram for Powering Up

The delay between PWR_EN going high with respect to VCC going high is not critical. Digi International recommends a 10 milliseconds delay.

2.4.2 Powering Down

The host controller can power down the m10 by setting the PWR_EN pin to LOW. The host controller can leave the supply voltage for Digi m10 ON, or remove it at its discretion. If the supply is left ON with PWR_EN set to low, the Digi m10 will be powered down. However, it will consume a leakage current of less than 3 µA. The timing diagram of the Digi m10's power down sequence is shown in Figure 5.

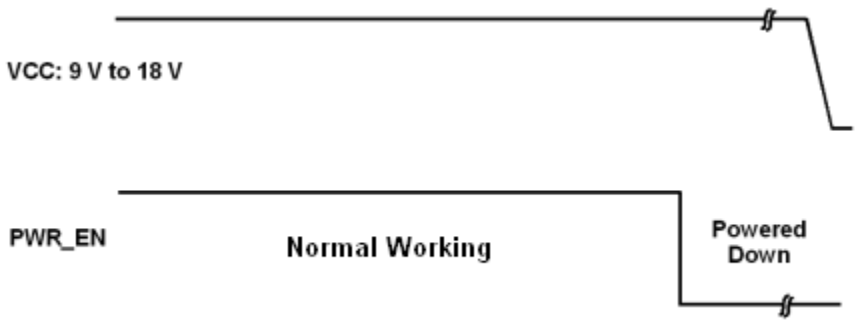

Figure 5: Timing Diagram for Powering Down

It is the responsibility of the host controller to back up all messages, reports, GlobalGrams, etc. before powering down the Digi m10.

2.5 DA (Data Available)

The Data Available signal is an active high signal. It is normally low and is driven high when the Digi m10 receives messages, user commands, or Global Grams from the satellite. The signal goes low only after the host controller has cleared the outbound (OB) queue. The Digi m10's timing diagram for DA is shown in Figure 6.

Table 5: DA Pin

Pin	Name	Description
10	DA	Data Available

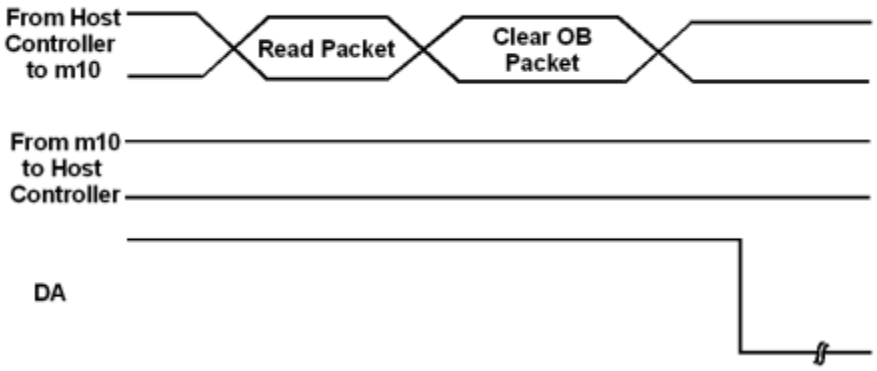

Figure 6: Timing Diagram for Data Available

2.6 SA (Satellite Available)

The Satellite Available is an active high signal. It is normally low and is set to high when the Digi m10 is receiving valid downlink signals. The Digi m10's timing diagram for SA is shown in Figure 7.

Table 6: SA Pin

Pin	Name	Description
9	SA	Satellite Available

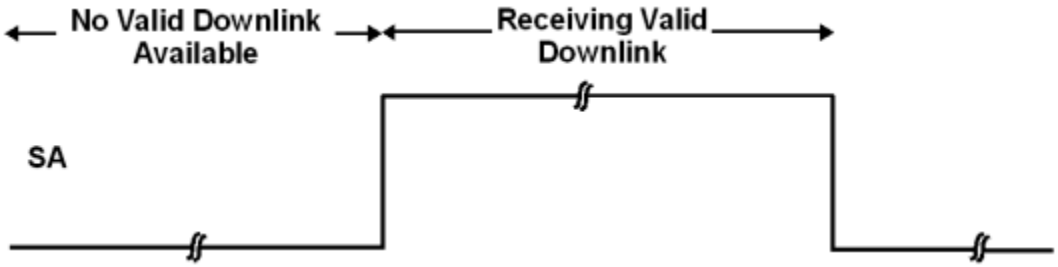

Figure 7: Timing Diagram for Satellite Available

2.7 RF Interface

The RF connector for the Digi m10 (see Figure 8) is an MMCX plug, with an impedance of 50 Ω nominal. Refer to Table 7 for details.

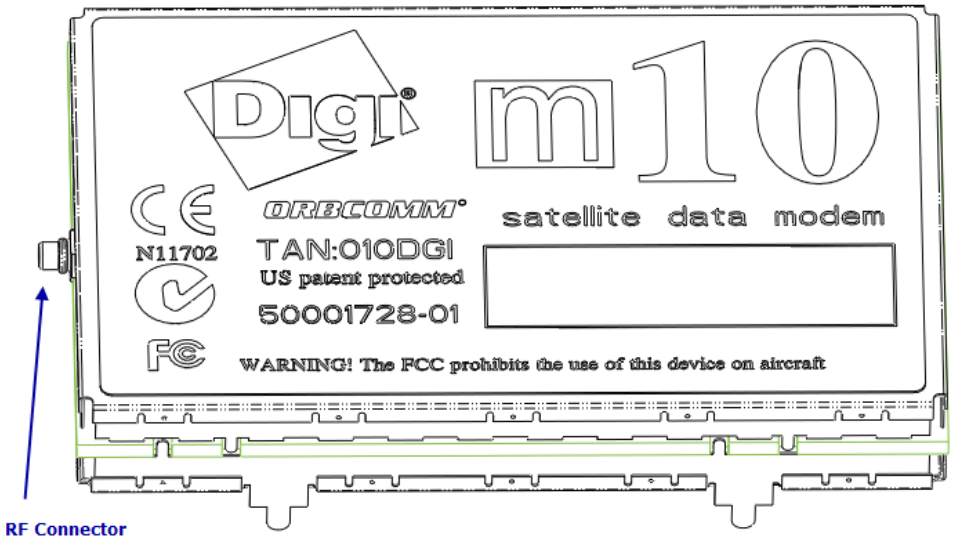

Figure 8: RF Connector on the Digi m10

Table 7: RF Interface Details

Parameter	Value
Transmit Power	5 W (37 + / -1 dBm)
TX Frequency	148 MHz to 150.05 MHz
RX Frequency	137 MHz to 138 MHz
VSWR	< 2:1 preferred

Parameter	Value
Sensitivity	≥ -119 dBm
Dynamic Range	40 dB
Antenna Gain	≥ 0 dBi, in at least one direction
Antenna Impedance	50 Ω nominal

The Digi m10 is protected from VSWR failure. However, for best performance, Digi International recommends using an antenna with good VSWR readings (see Table 7) at both the RX and TX frequencies.

3. Technical Specifications

This chapter describes the environmental, electrical, and mechanical specifications of the Digi m10.

3.1 Environmental

The Digi m10 conforms to the relevant sections of the following documents:

1. ORBCOMM Subscriber Communicator (SC) Standards and Specifications
2. SAE J1455 Joint SAE / TMC Recommended Environmental Practices for Electronic Equipment Design (Heavy-Duty Trucks)
3. FCC Part 2 and Part 25
4. CE mark (EC directive- 95 / 5 / EC)

3.1.1 Electromagnetic Compatibility

3.1.1.1 Radiated Emissions

The Digi m10 conforms to *Section 4.1 Radiated Emissions* of the *ORBCOMM Subscriber Communicator (SC) Standards and Specifications* document for emission within and outside the 148.000 to 150.050 MHz band. Refer to *EN 3200 721* for details.

3.1.1.2 Conducted Emissions

The RF connector on the Digi m10 complies with the test methodology and test levels for conducted emissions defined in *EN 300 832*. Refer to *Section 4.3 Conducted Emissions* of the *ORBCOMM Subscriber Communicator (SC) Standards and Specifications* document.

3.1.1.3 Radiated Immunity

The Digi m10 complies with the test methodology and test levels for radiated immunity, defined in *EN 300 832* (i.e. 80MHz – 1000MHz at 3V/m.) Refer to *Section 4.2 Radiated Immunity* of the *ORBCOMM Subscriber Communicator (SC) Standards and Specifications* document.

The Digi m10 also complies with the test methodology defined in *IEC 1000-4-6* for radiated immunity at the following test levels:

- 1 V for 10 - 150 KHz
- 10 V for 0.15 - 2.0 MHz
- 10 V for 2 - 80 MHz

3.1.1.4 Conducted Immunity

The RF connector on the Digi m10 complies with the test methodology and test levels for conducted immunity defined in *EN 300 832*. (Refer to *Section 4.4 Conducted Immunity* of the *ORBCOMM Subscriber Communicator (SC) Standards and Specifications* document.

3.1.1.5 Electrostatic Discharge

The RF connector on the Digi m10 has protection against electrostatic discharge (ESD) events of 8 kV contact discharge and 15 kV air discharge with the *Human Body Model*. The RF connector also complies with the test methodology and test levels at the RF pin defined in *EN 300 832*.

3.1.2 RoHS

The Digi m10 complies with the European Union's directive *2002 / 95 / EC, Restriction of Hazardous Substances in Electrical and Electronic Equipments (RoHS)*, and similar regulations that may be adopted by other countries. The RoHS directive restricts lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyis (PBBs), and polybrominated biphenyl ethers (PBDEs) in electrical and electronics equipment, except for certain maximum concentration levels in homogeneous materials.

This specification applies to all materials, parts, components, and / or products used in the Digi m10.

3.1.3 Operating Temperature

The Digi m10 operates from -40 °F to +185 °F (-40 °C to +85 °C). The lower temperature limit has been verified in accordance with *MIL-STD-810E, Method 502.3*, *Procedure II*, 4-hour test duration. The upper temperature limit has been verified in accordance with *MIL-STD-810E, Method 501.3, Procedure II*, 3-diurnal-cycle test duration. Refer to *Sections 3.2 High Temperature and 3.3 Low Temperature* of the *ORBCOMM Subscriber Communicator Standards and Specifications* for the temperature limits and verification methodology.

The Digi m10 has been designed and tested to operate under the conditions shown in Table 8.

Table 8: Operating Conditions

Operating Temperature	Humidity Cycle	Comments
-40 °F to +185 °F (-40 °C to +85 °C)	70% relative humidity (RH) – 40% moisture by volume	For 24 hours with a 12 V supply

3.1.4 Storage Temperature

The Digi m10 can be stored for extended periods from -40 °F to +185 °F (-40 °C to +85 °C). It has been subjected to the upper and lower temperature limits for 24 hours each and then checked for stability.

3.1.5 Operational Shock

The Digi m10 remains structurally intact and operational after the drop test (as defined in *SAEJ1455*) from 1.22 m onto each of its corners and its face.

The Digi m10 also meets the *MIL-STD-810E, Method 516.4, Procedure I* as defined in the *ORBCOMM Subscriber Communicator (SC) Standards and Specifications*.

3.1.6 Operational Vibration

The Digi m10 meets the *MIL-STD-810E, Method 514.4* and *ETSI 300 721* as defined in the *ORBCOMM Subscriber Communicator (SC) Standards and Specifications*.

In addition, the Digi m10 has also been tested according to *SAEJ1455* (as per the practices for heavy duty trucks), which specifies that the vibration profile for CAB-mounted vibration PSD for Vertical Axis (*Figure 6*, 1.04 g rms) is to be tested in three mutually perpendicular planes and that a sweep rate of ½ octave per minute is to be used.

3.2 Electrical

This section describes the electrical specification of the Digi m10. Many of the requirements listed below refer to the *ORBCOMM Subscriber Communicator (SC) Standards and Specifications* document.

3.2.1 Power Design

3.2.1.1 Power Supply

The Digi m10 operates on a single unregulated power source of 9 V to 18 V DC (nominal 12 V) supplied through the pins of the host connector. The Power ON / OFF control circuit is outside the Digi m10 and is controlled by host controller.

- Low: OFF state
- High: ON state

The Digi m10 does not have reverse polarity protection. Therefore, ensure that only positive voltage is supplied to avoid damaging it.

3.2.1.2 Typical Power Consumption

The typical current consumption is as follows:

- **Transmitting**: ~1.5A at 12V nominal input power, when the RF Module is transmitting at 5 W output power.
- **Receiving**: 70mA to 80mA at 12Vnominal input power when searching for or continuously receiving the satellite signal.
- **Powering-down**: <3 µA at 12 V when the Digi m10 is in the OFF state.

The input supply for the Digi m10 should be in the range of 9 V to 18 V and the input supply should be able to source up to 2 A.

The Digi m10 does not need a constant 2 A current. Instead, 2 A will be consumed as pulsed current when the RF transmit is in progress. The power supply must be able to source 2 A instantaneously (<100 µs), otherwise communications will fail. m10 supply voltage ripple should be maintained below 0.3V and supply trace resistance below 0.15ohms.

The transmitter ON time can vary from 3.3 milliseconds to 4.8 seconds respectively.

3.2.2 Digital Input / Output Specifications

The output pins can source / sink up to 10mA. For higher currents, the outputs must be buffered.

Table 9: Digital I/O Electrical Specifications

Parameter	Min (V)	Max (V)	Maximum Recommended Load
$V_{Input\ Low}$	0	0.8	Not applicable (NA)
$V_{Input\ High}$	2.0	3.3	NA
$V_{Output\ Low}$	0	0.4	2 mA
$V_{Output\ High}$	2.4	3.3	2 mA

3.2.3 Lifespan

3.2.3.1 Design

Each major component has a product roadmap of pin-compatible replacements for a minimum of 3 years.

3.2.3.2 Failure Rate

The Digi m10 has a Mean Time between Failure (MTBF) of at least 43,800 hours with a transmitter duty cycle of 0.05% and receiver duty cycle of 99.95% over the entire period. Refer to *Section 2.2.9 Reliability* of the *ORBCOMM Subscriber Communicator (SC) Standards and Specifications*.

3.3 Mechanical

This section describes the mechanical specification of the Digi m10.

3.3.1 Module Size

The Digi m10 (see Figure 9 has a maximum footprint of 2.96" x 1.81" x 0.52" (75.30 mm x 46.20 mm x 13.35 mm) with all the RFI covers in place.

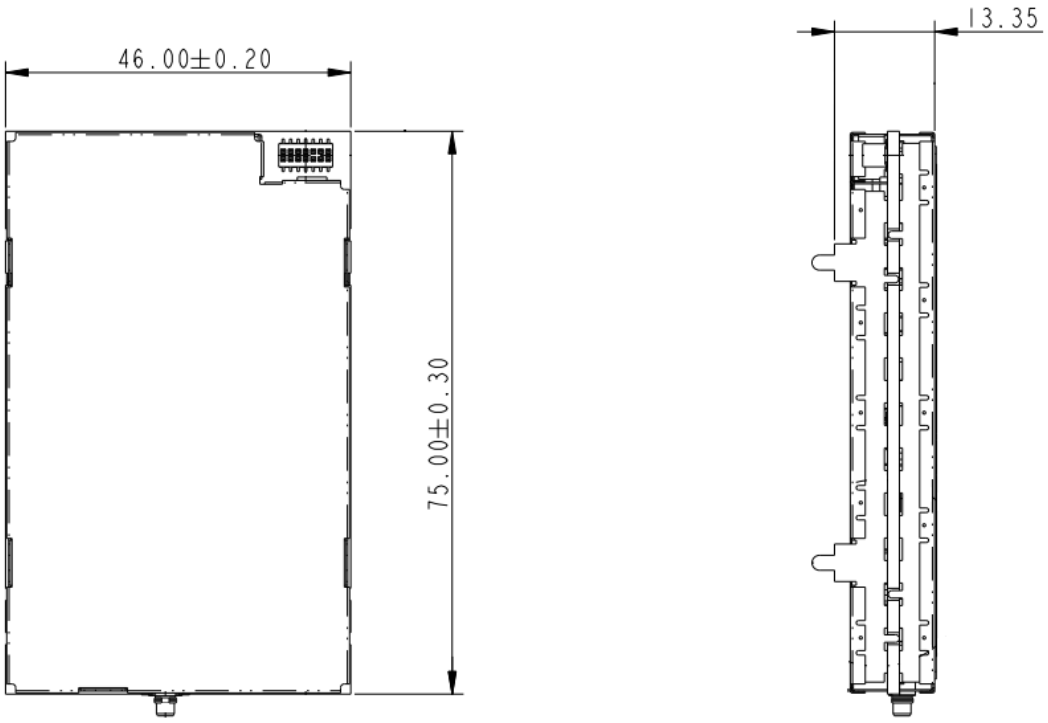

Figure 9: Digi m10 Dimensions

3.3.2 Mounting

The Digi m10 can be mounted directly to the host PCB using a board-to-board connector. The Digi m10 has five solder legs, which must be soldered to the host controller's common ground reference plane. The host controller's PCB needs to have five mounting holes to accommodate the Digi m10.

The ground reference planes for the Digi m10's connector and solder legs should be the same as they are connected together within Digi m10

4. Approvals and Certifications

The Digi m10 satellite modem carries the following certifications and regulatory approvals and certifications:

- FCC
- CE Mark
- C-Tick (Australia/New Zealand)
- ORBCOMM Type Approval
- SAE

5. Using the Digi m10

This chapter describes the details regarding the functioning of the Digi m10.

5.1 Interfacing with the Digi m10

Figure 10 illustrates how the host controller can be interfaced with the Digi m10.

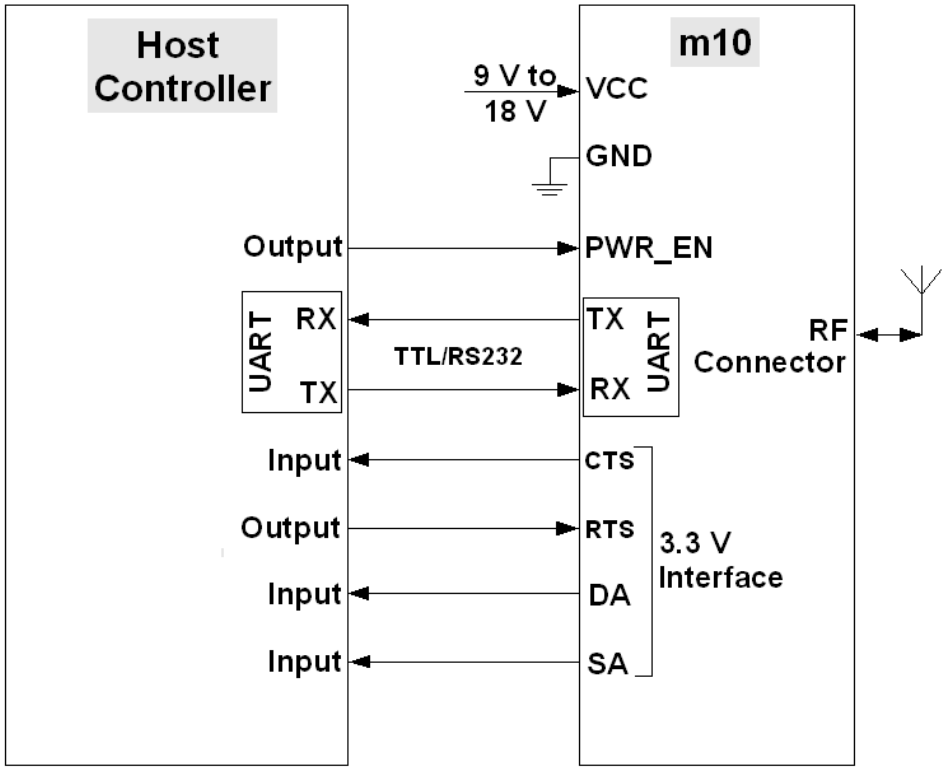

Figure 10: Interface Between the Host Controller and the Digi m10

If Digi m10 is being used, then the UART signals are at TTL levels.

5.2 The Digi m10 JumpStart Kit

The development board (see Figure 11) provides users with an easy way to evaluate the Digi m10.

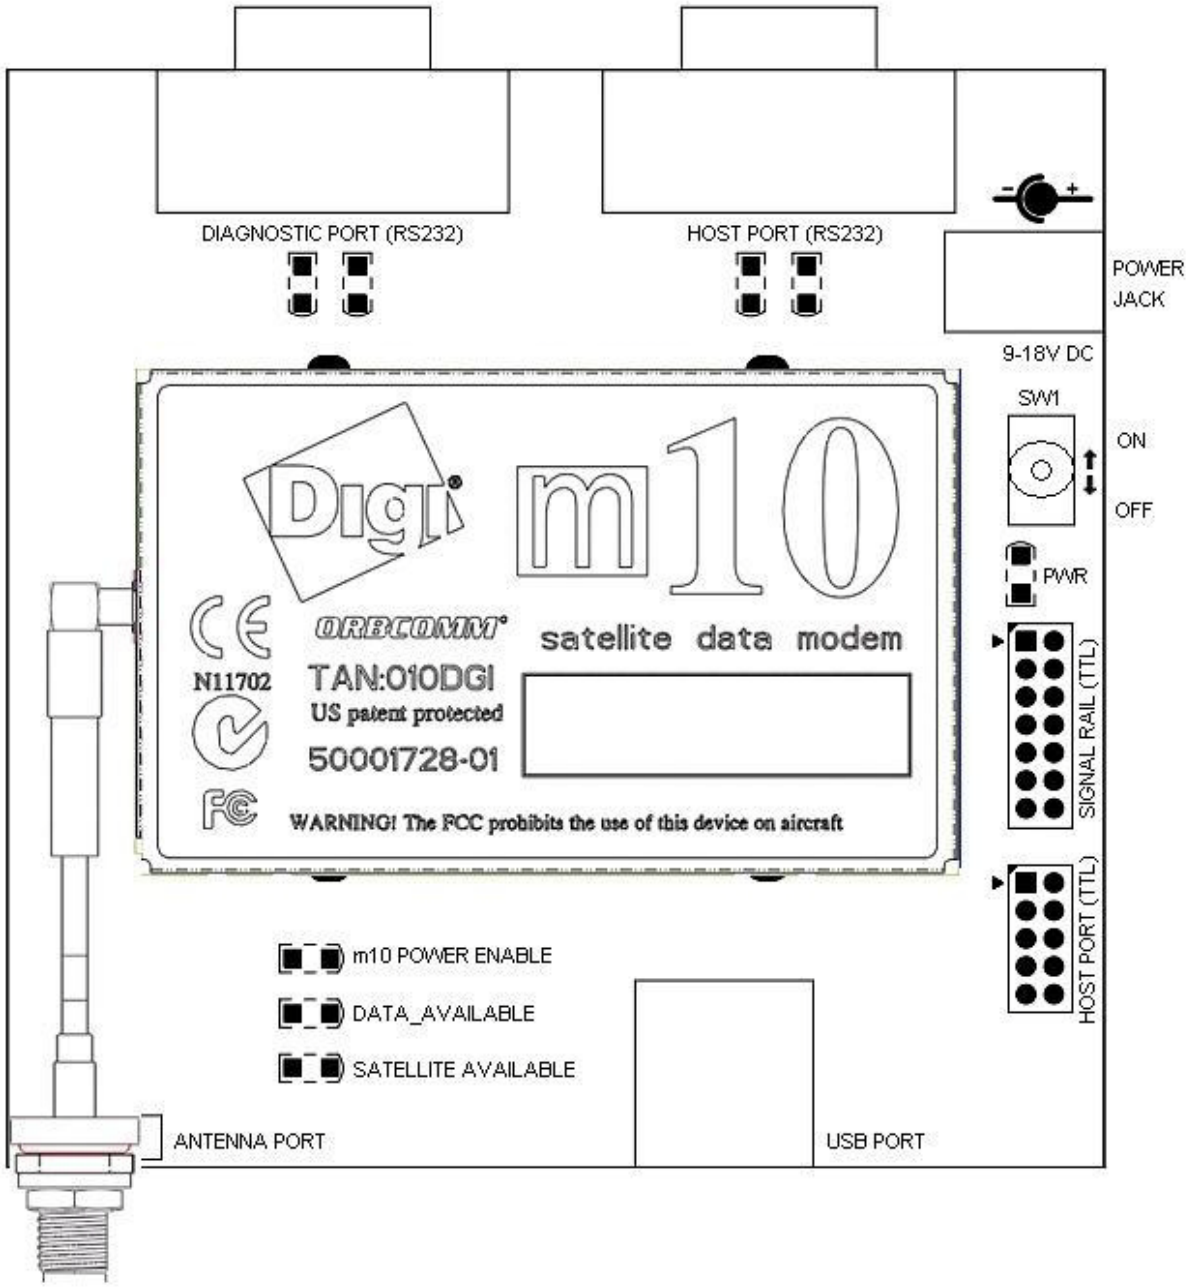

Figure 11: Layout of the Development Board

The different components of the development board are as follows:

- **SW1**: This switch is used to power ON the JumpStart kit, which is indicated by the glowing of red LEDs (Digi m10 POWER ENABLE).

- **Power Jack**: A 9 - 18 V supply can be fed through this jack.

- **Diagnostic Port**: The Digi m10's diagnostics can be accessed through this port using a terminal emulation program. the interface is at RS-232 levels. Amber LEDs next to this port indicate that it is active.
- **Host Port (RS232)**: Users can send ORBCOMM serial commands to the Digi m10 at RS-232 levels using this port. Amber LEDs next to this port indicate that it is active.
- **Host Port (TTL)**: Users can send ORBCOMM serial commands to the Digi m10 at TTL levels using this port.
- **USB Port**: Users can send ORBCOMM serial commands to the Digi m10 using this port.
- **Signal Rail (TTL):** This is a pin- to-pin mapping of the Digi m10 interface connector.
- **Data Available**: This blue LED illuminates when the Digi m10 receives messages, user commands, or Global Grams from the satellite. It will also be asserted and de-asserted once after power on, when the Digi m10 is ready to accept commands. Refer to Section 2.5 for further details.
- **Satellite Available**: This green LED illuminates when the Digi m10 is receiving valid downlink signals. Refer to Section 2.6 for further details.

Only one of the Host port serial interfaces on the development board should be connected at a time.

6. Antenna Information

1. **Which antenna should be used with the Digi m10?**

   Please refer to *ORBCOMM Application Note #12*, which can be downloaded from http://www.orbcomm.com/equipment/pdf/App_Note_12__ORBCOMM_Antennas.pdf. It provides details and comparisons of antennas from different vendors.

2. **If the antenna cable is not long enough to reach my installation, how do I pick a suitable RF cable to each it?**

   You can use any 50 Ω impedance, RF coax cable, provided the overall loss from the antenna to the Digi m10 is less than 3 dB at 150 MHz. The lower the cable loss, the costlier the cable, so there is a trade off between price and performance. LMR-400 would be an ideal choice for a 100 feet long cable. LMR-195 is an excellent choice for shorter lengths.

3. **What should I consider when I mount my antenna?**

   The antenna should be kept away from metal objects and the objects should not be parallel to the antenna, as this will degrade the performance of the antenna. If a VSWR meter is available, measure the VSWR of the antenna at 137.5 MHz and 149 MHz. A VSWR reading below 2 is required for good performance from the antenna.

Appendix A: Digi m10 Mechanical Drawings

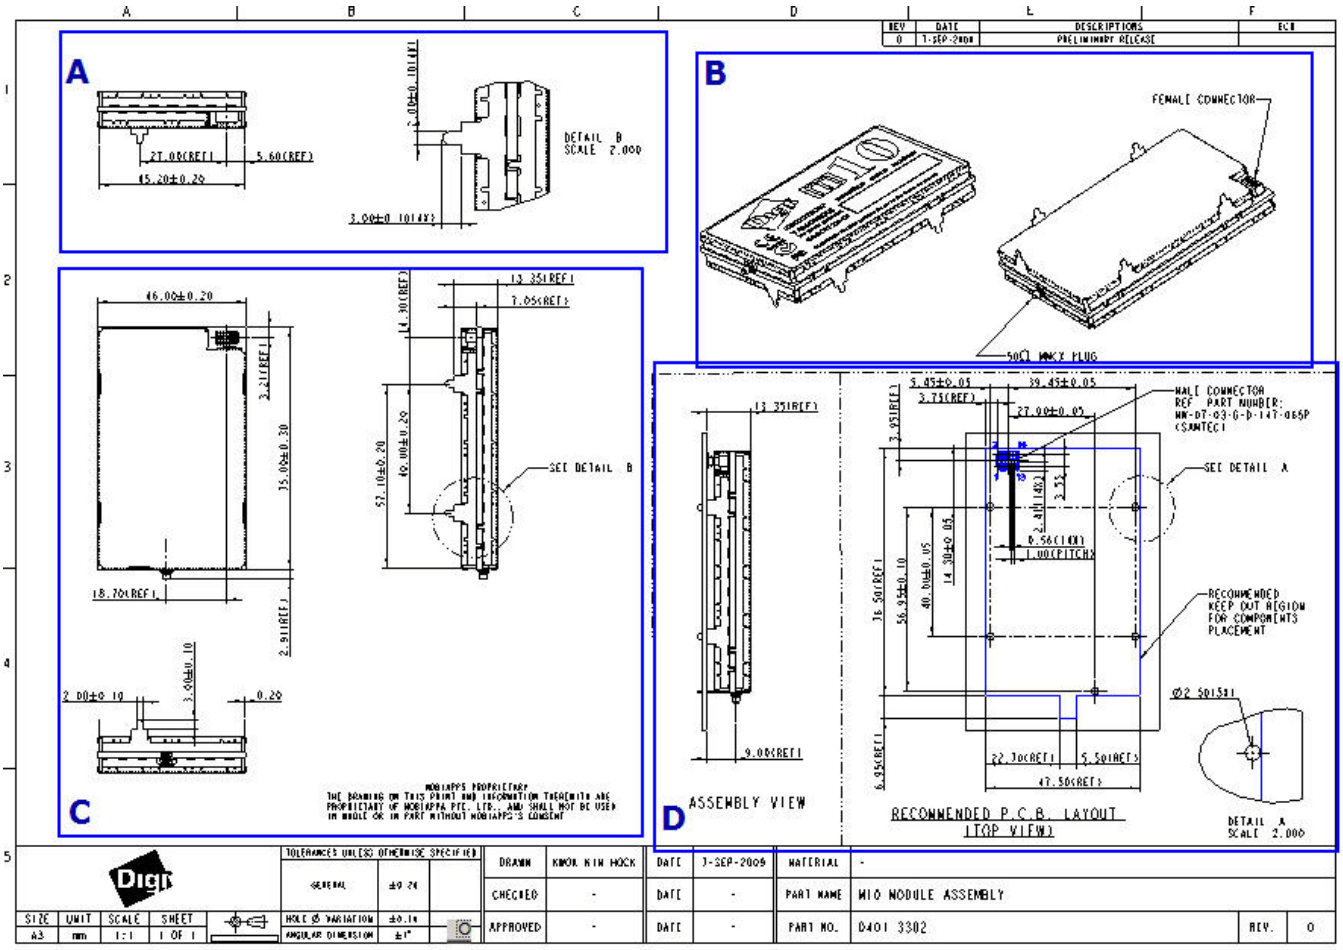

Figure 12: Digi m10 Mechanical Drawing

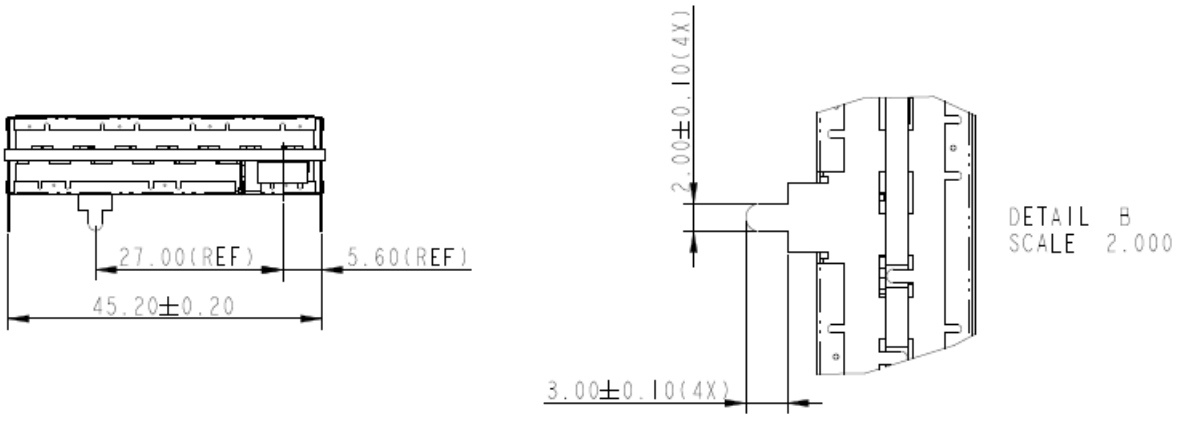

Figure 13: Digi m10 Mechanical Drawing: Part A

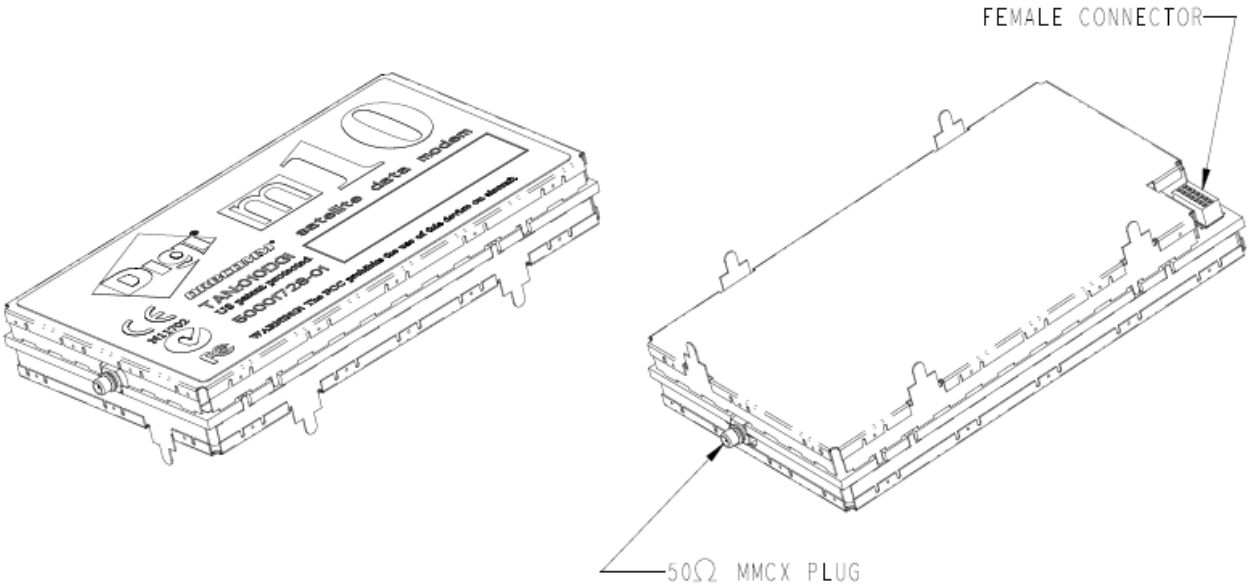

Figure 14: Digi m10 Mechanical Drawing: Part B

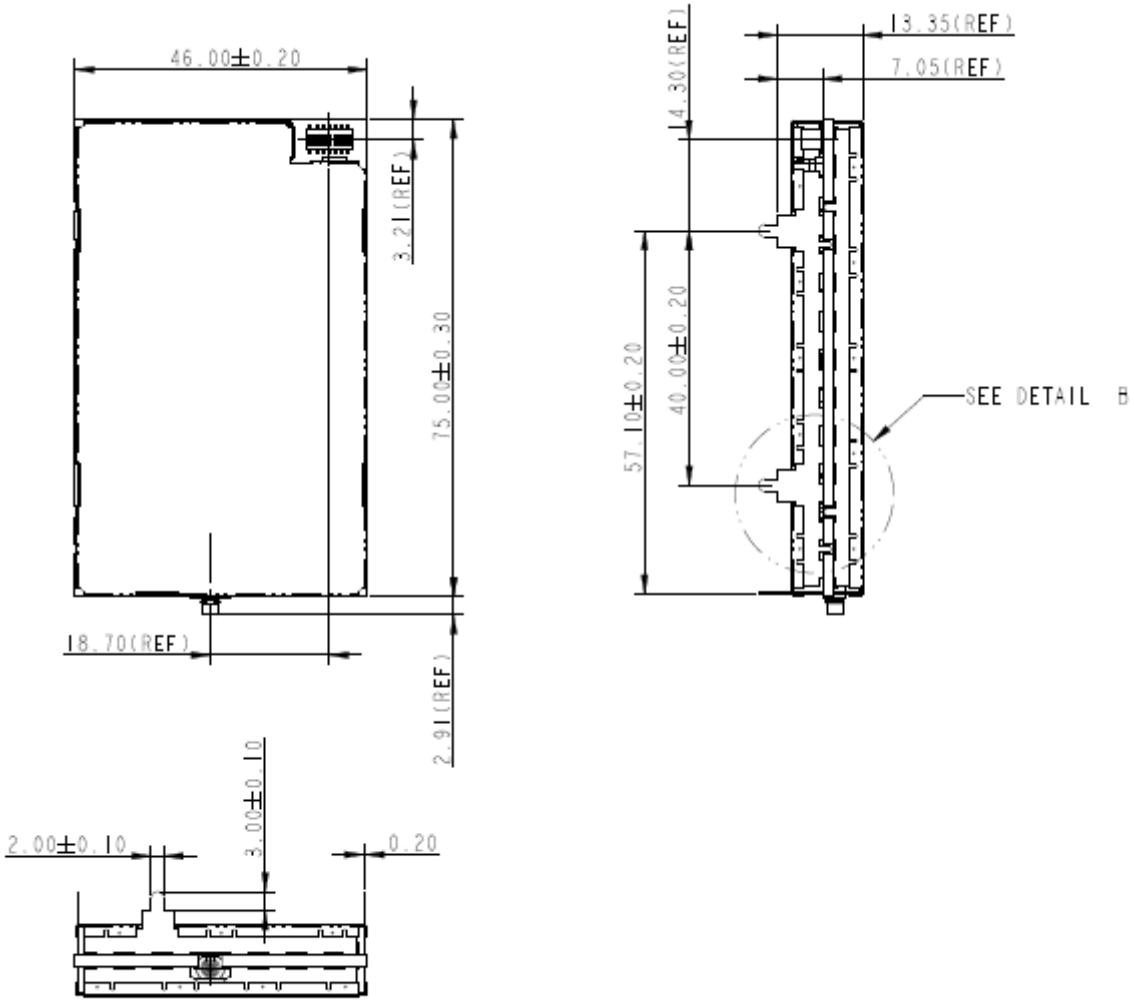

Figure 15: Digi m10 Mechanical Drawing: Part C

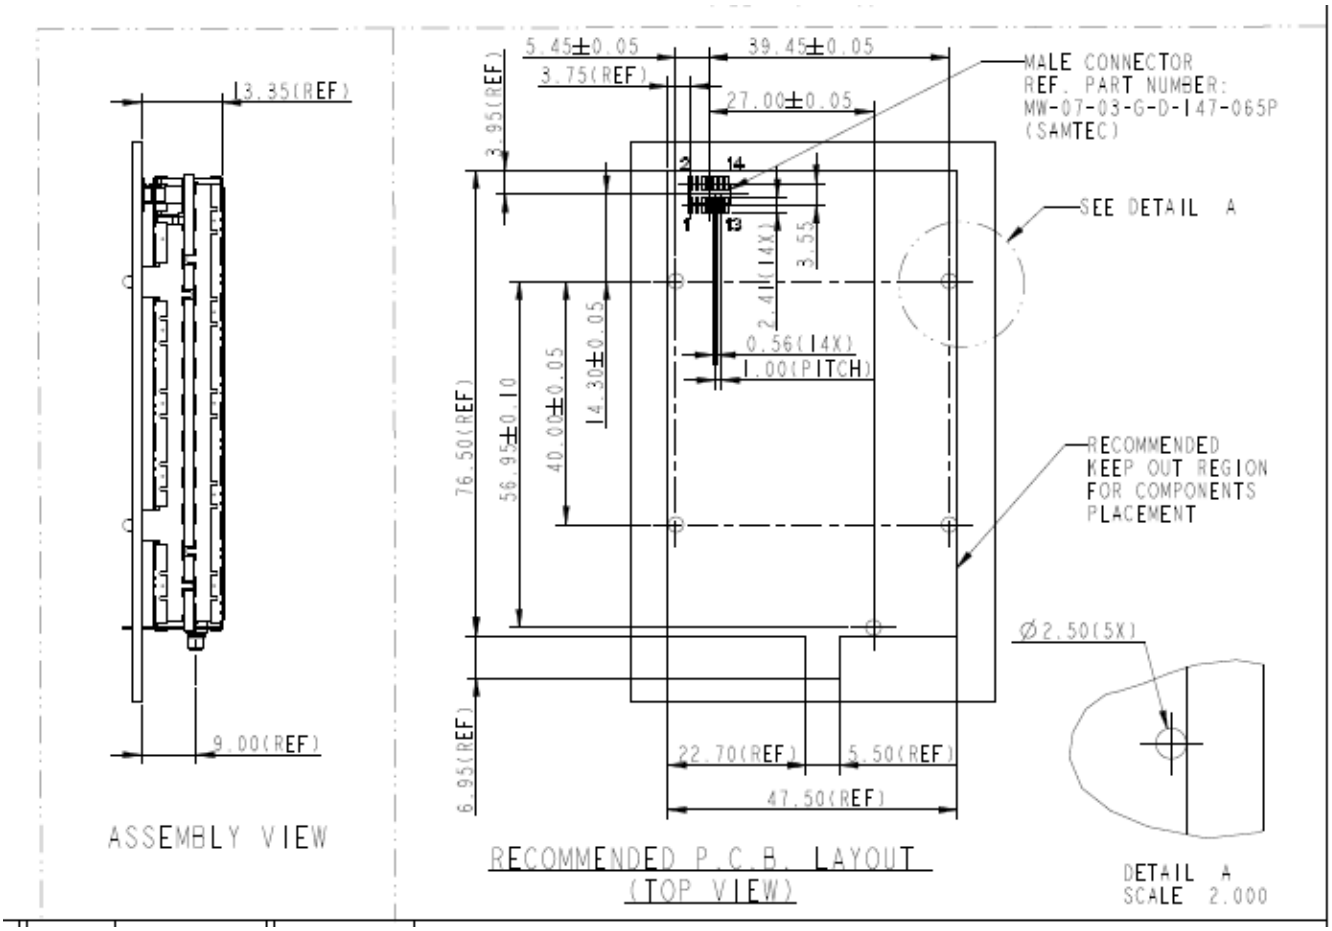

Figure 16: Digi m10 Mechanical Drawing: Part D

Appendix B: Development Board Mechanical Drawings

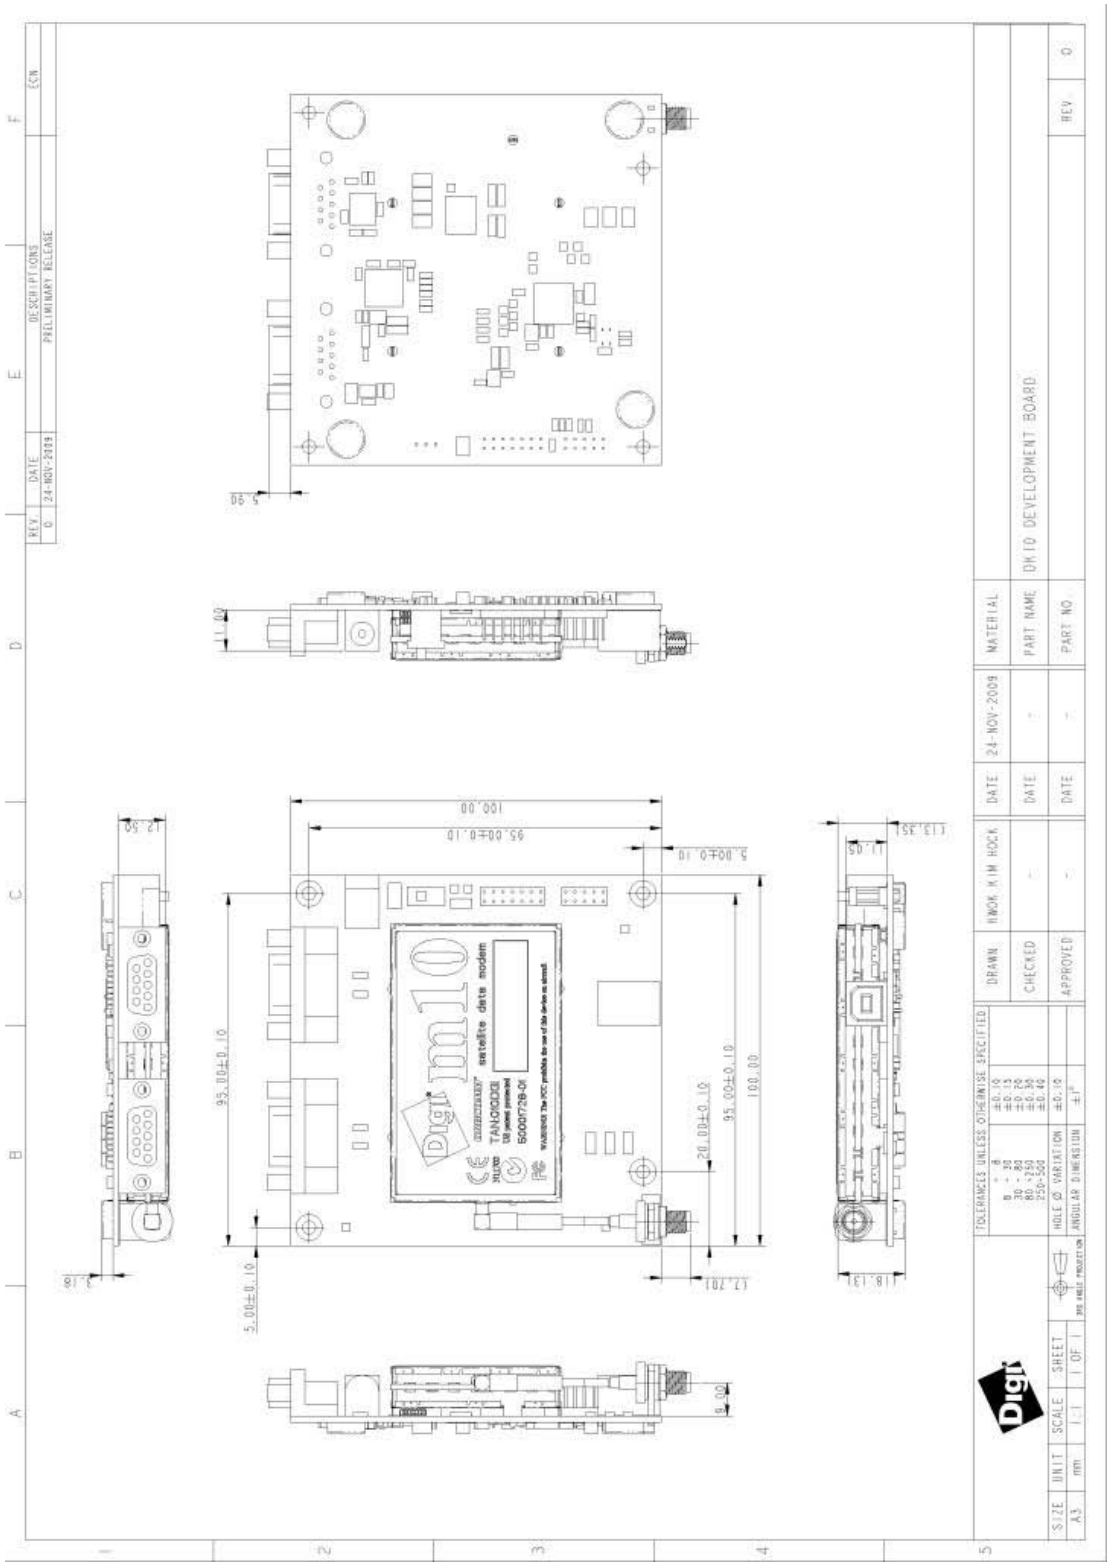

Appendix C:: Digi m10 Development Board Schematic

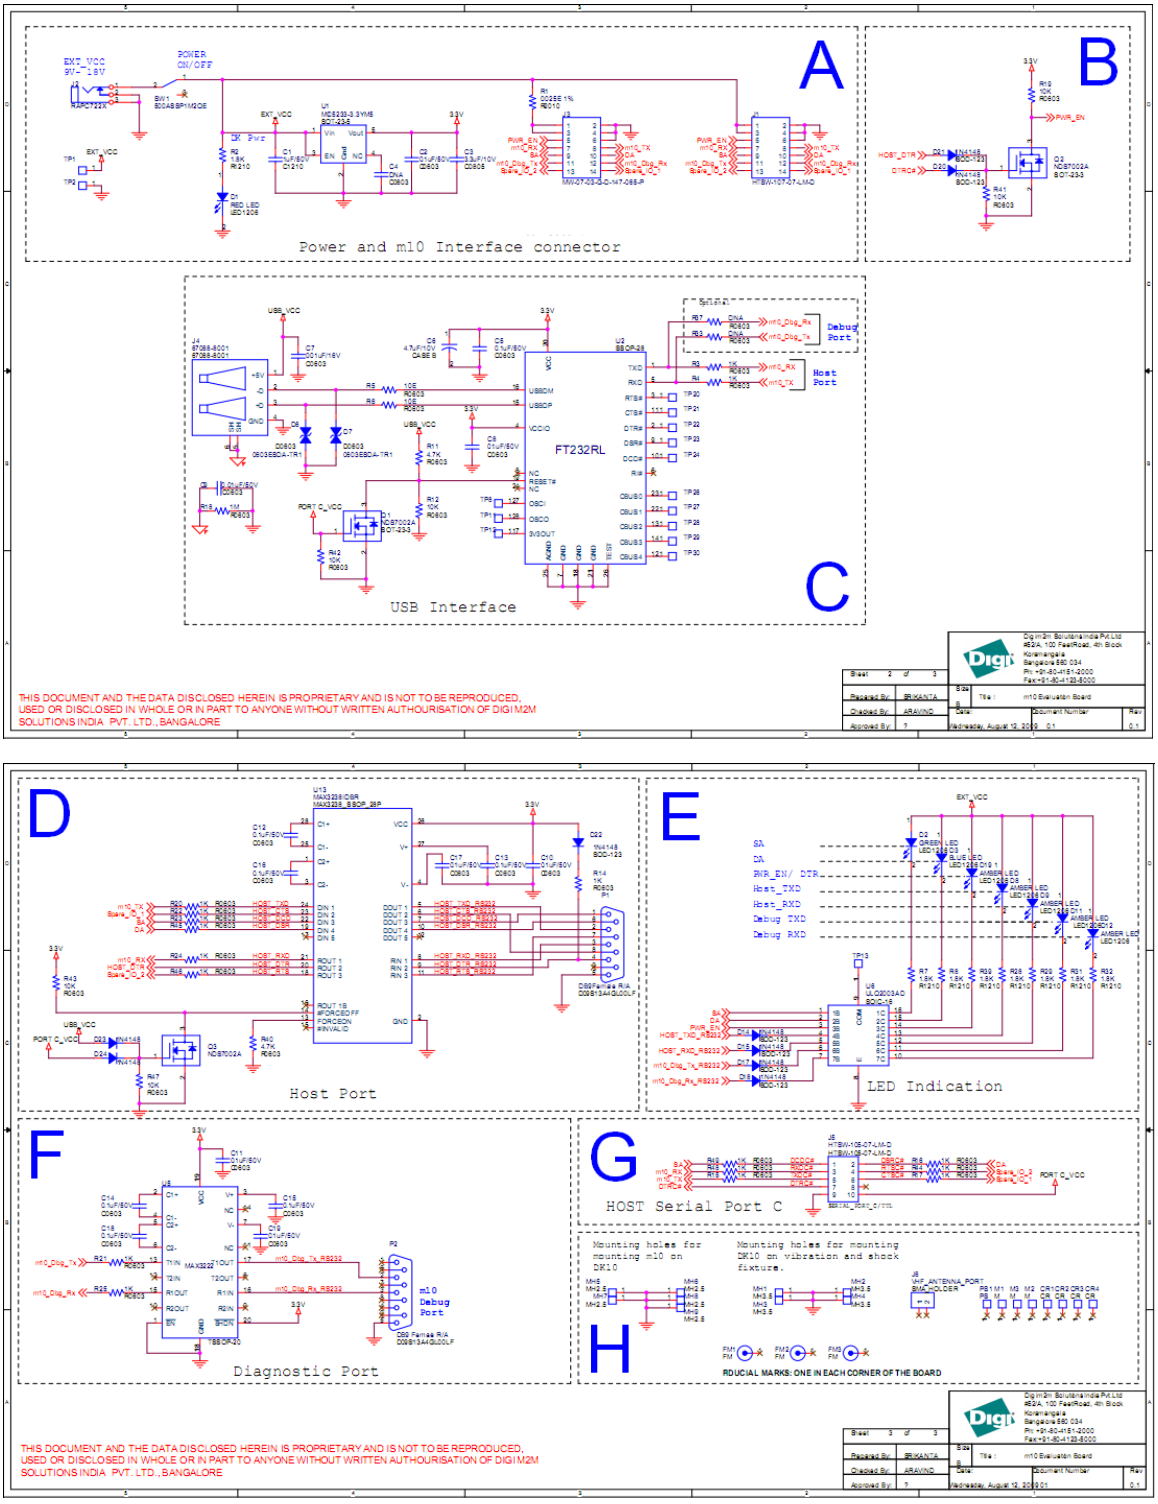

Figure 17: Development Board Schematic

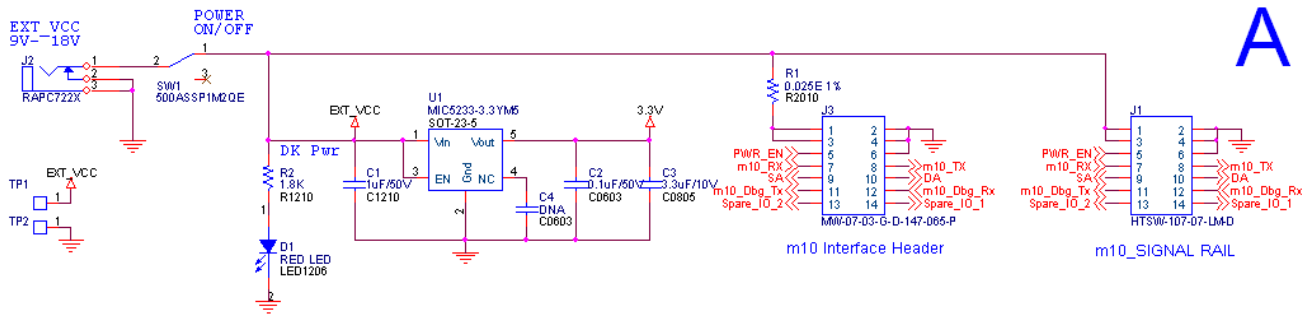

Figure 18: Development Board Schematic (Part A)

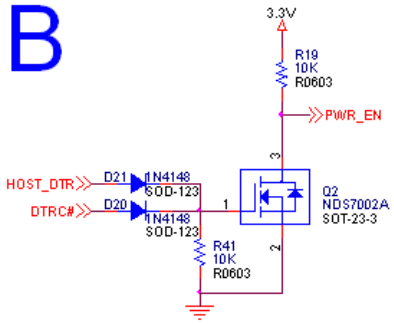

Figure 19: Development Board Schematic (Part B)

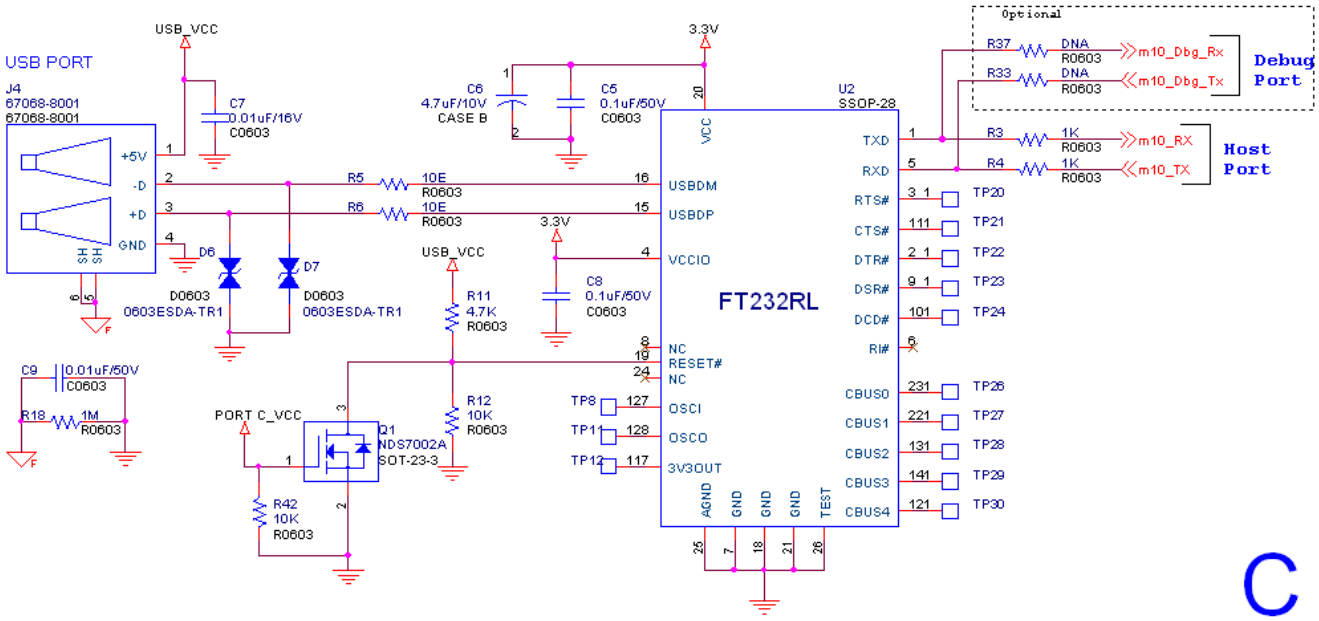

Figure 20: Development Board Schematic (Part C)

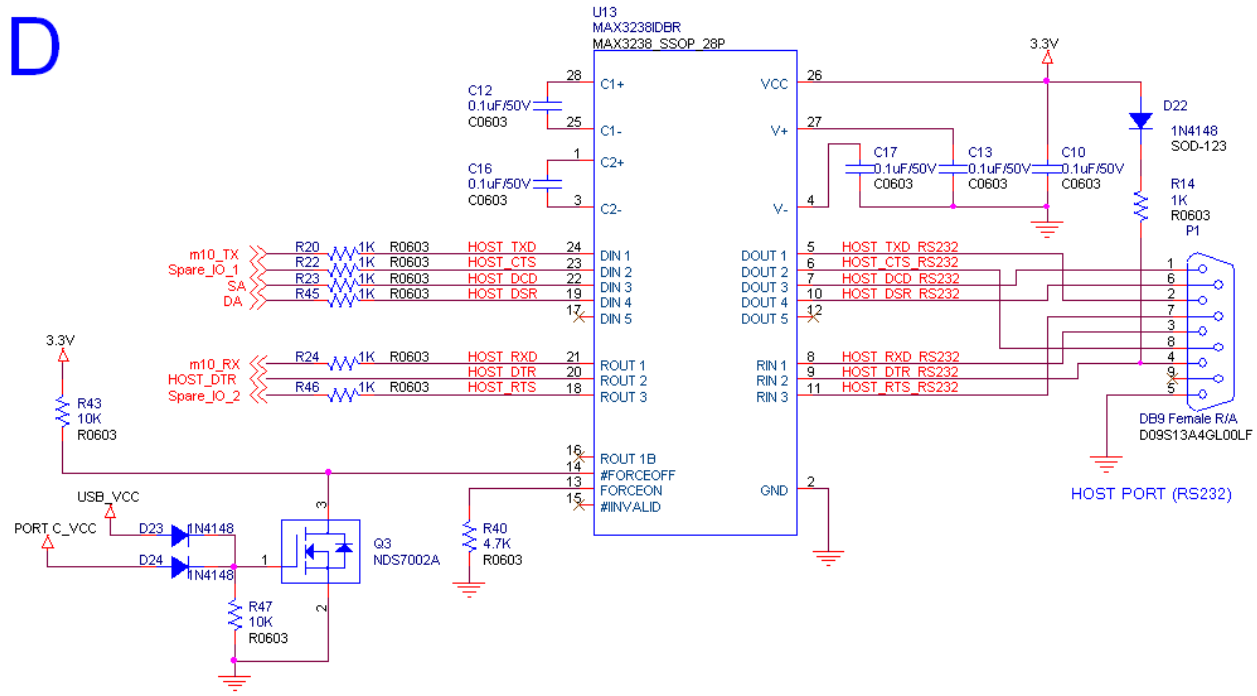

Figure 21: Development Board Schematic (Part D)

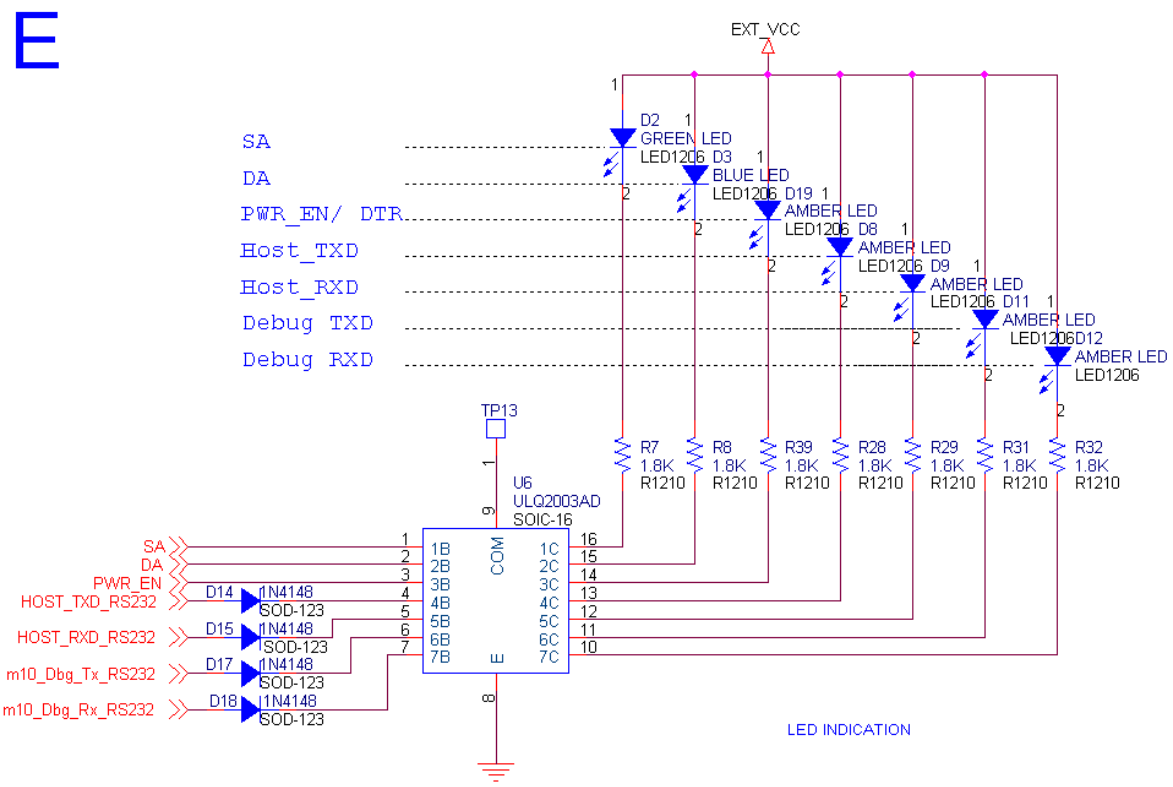

F

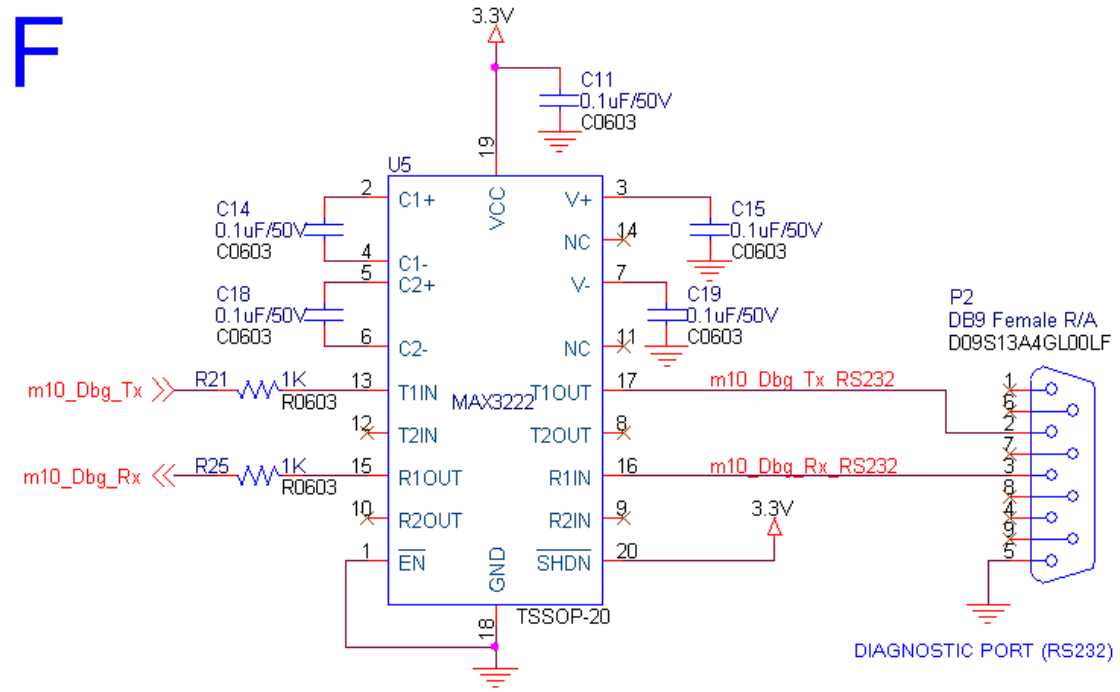

G

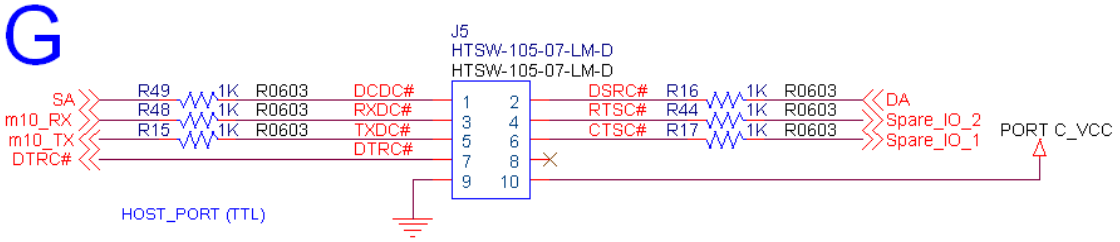

Mounting holes for mounting m10 on DK10

Mounting holes for mounting DK10 on vibration and shock fixture.

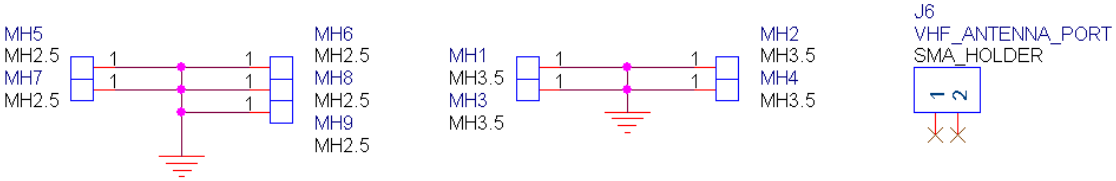

H

Fiducial Marks